

© 2009 Biolase Technology, Incorporated. All Rights Reserved.

BIOLASE ezlase™ Quick Reference Guide.

BIOLASE, the BIOLASE logo, ezlase™, the ezlase™ logo are either registered trademarks or trademarks of BIOLASE Incorporated in the United States and/or other countries.

*waterlase***dentistry*

waterlasedentistry.com Toll-free 888-424-6527

biolase.com

NASDAQ: BLTI

USA

Biolase Headquarters
4 Cromwell
Irvine, CA 92618
T 949 361 1200
F 949 273 6687

Germany

ECIREB Biolase Europe GmbH
Paintweg 10
92685 Floss, Germany
T 49 9603 8080
F 49 9603 2360

Australia

Biolase Australia Pty. Ltd.
26 Wakeham Street
Adelaide, South Australia 5000
T +61 8 8227 1780
F +61 8 8232 9241
ABN 116 912 353

New Zealand

Biolase NZ Ltd.
P.O.Box 302628, North-Harbour
Auckland 1330, New Zealand
T +64 9 479 6215
F +64 9 479 6216
ABN 1737441

From **BIOLASE**

An Exclusive
Partner of

HENRY SCHEIN®
DENTAL



P/N 5400046 Rev. E (2/2009)

ezlase Soft Tissue Diode*



INDEX

Warnings2

Equipment Description3

Step 1: System Setup5

Step 2: Connecting Handpiece and Tips7

Step 3: Operating.....9

Step 4: ezlase™ Specifications10

WARNINGS

- ▶ Make sure distal end of the handpiece is protected from contamination with tip plug when laser is not in use. If window at the fiber shaft is dirty, disconnect handpiece and clean window with cotton swab moistened with alcohol.
- ▶ DO NOT touch the input end of the tip.
- ▶ STOP immediately if handpiece or tip canula is hot. Replace tip.
- ▶ STOP immediately if you see tip ferrule glowing yellow, not red. Replace the window.
- ▶ DO NOT operate if aiming beam is not present at distal end of the tip.
- ▶ DO NOT use 200 μm tip with power set above 3.0 Watts.
- ▶ To ensure proper wireless communication, always power up unit with the footswitch cable connected (See Step 1).



CAUTION: Federal law restricts this device to sale by or under the order of a dentist or physician or other licensed practitioner.


EQUIPMENT DESCRIPTIONS






STEP 1: SYSTEM SETUP

- 1.1 Connect power cord to power connector on the unit and plug into wall outlet;
- 1.2 Connect footswitch cable to the unit and to the footswitch;
- 1.3 Turn power switch to ON position. Welcome to ezlase™ screen will be displayed.
- 1.4 Enter the three digit key access code using the touch screen or Navigation wheel (right arrow ">" and Enter buttons). Access Key Code is 123;
- 1.5 System will go to the Main Menu. If code is entered wrong, reenter the code;
- 1.6 Disconnect and press the footswitch, it is now programmed to communicate with the system.

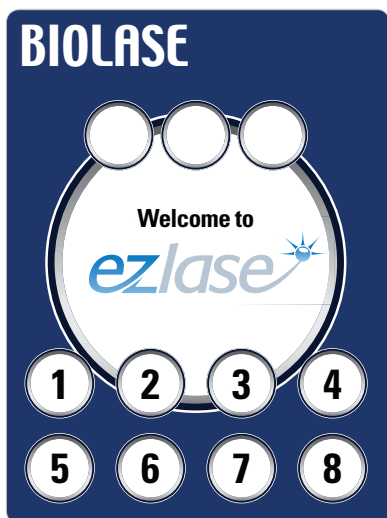

[Figure 1] Welcome Screen.

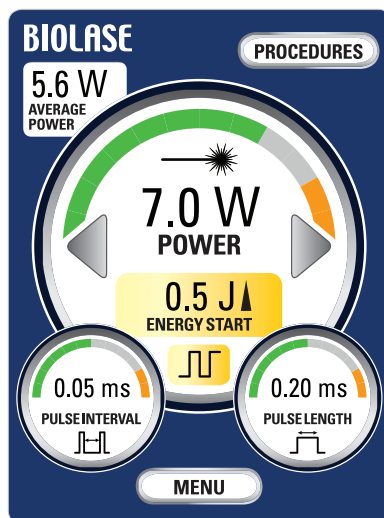


[Figure 2] Main Menu.

NOTE: Charge footswitch battery for 4 hours when first connected. Power switch should be ON. Before disconnecting the footswitch cord after each charging, re-cycle power by turning power switch OFF and ON to re-set wireless communication. Then unplug footswitch cord from the unit and from the footswitch. Press the footswitch – blinking blue LEDs confirm presence of wireless communication. Footswitch will operate for about 1 week without re-charge, so long as power switch is maintained in the "ON" position.

FRONT PANEL [Figure A]

#	Item	Item Description
1	ON/OFF	Turns the controls and display on and off.
2	READY	Allows energy delivery when footswitch is pressed.
3	READY LED	Indicates unit is in READY mode.
4	STANDBY	Does not allow energy delivery.
5	STANDBY LED	Indicates unit is in STANDBY mode.
6	EMISSION LED	Indicates emitting of the laser power.
7	WIRELESS ON	Indicates communication with footswitch.
8	NAVIGATION WHEEL	Allows to select functions and adjust parameters.

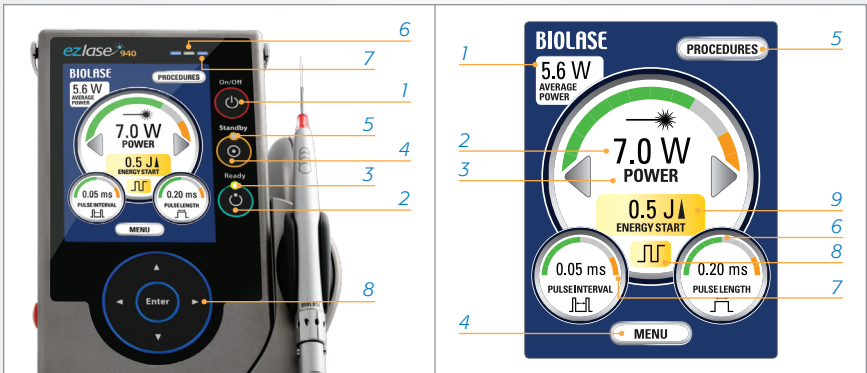

[Figure A]

[Figure B]

MAIN MENU [Figure B]

#	Item	Item Description
1	AVERAGE POWER DISPLAY	Indicates average power delivered.
2	MAXIMUM POWER DISPLAY	Indicates maximum allowable delivered power.
3	POWER (up/down)	Allows adjustment of delivered optical power.
4	MENU	Selects user function.
5	PROCEDURES	Selects pre-set procedure parameters.
6	PULSE LENGTH (up/down)	Allows adjustment of laser ON time.
7	PULSE INTERVAL (up/down)	Allows adjustment of laser OFF time.
8	LASER MODE	Allows switching and indicates laser operation mode (continuous or pulsed).
9	ENERGY DISPLAY	Allows setting and displays amount of laser energy that has been delivered or to be delivered.


STEP 2: CONNECTING HANDPIECE AND TIPS

2.1 ezlase™ is shipped with the handpiece and tip plug connected. To disconnect the handpiece from Fiber Shaft:

- ▶ Take handpiece body in one hand and the shaft in another;
- ▶ Push two buttons on the handpiece shaft;
- ▶ Pull handpiece with the ring to separate.



[Figure 3] ezlase™ Handpiece Assembly

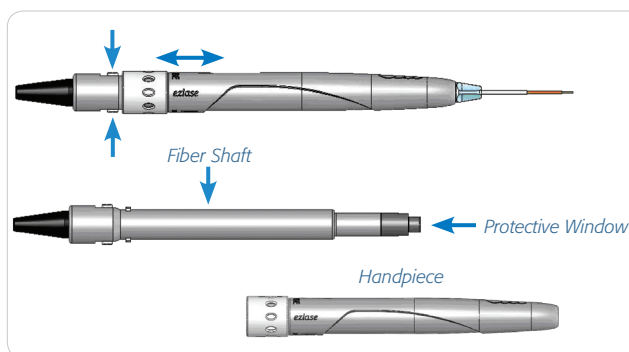

[Figure 4] Disconnecting the Handpiece (push both buttons)

- 2.2 Verify visually that Protective Window is clean. If not, use cotton swab moistened with alcohol;
- 2.3 Carefully connect the Handpiece by sliding it over the fiber shaft until it clicks into place;
- 2.4 Insert the selected tip and tighten it clockwise until snug.



NOTE: To ensure proper operation, regularly check the protective window and clean it if necessary.



NOTE: The tips for ezlase™ are fingers-bendable single-use accessories, which are provided in three core diameters: 200 µm, 300 µm and 400 µm and different lengths. Tips are intended for single-use only and must be sterilized prior to use.



[Figure 5] Disconnecting the fiber Tip (twist first counter clockwise)



CAUTION: Do not bend tips with sharp angle – it will break the tip. If the red aiming beam is not present in READY mode – replace the tip.



Bend



Right



Wrong

[Figure 6] Bending the tip canula.

2.5 Wind excess fiber optic cable on to fiber spool (clockwise).

2.6 Place handpiece in handpiece holder.



NOTE: The fiber optic cable is permanently attached to the ezlase™ Console. The Handpiece is a reusable accessory. The Handpiece will require cleaning and sterilization after each patient treatment.



CAUTION: Never operate the laser without a fiber tip attached.



CAUTION: All persons present in the operatory must wear appropriate laser eyewear protection for the diode laser wavelength of $940 \pm \text{nm}$, $810 \pm 15 \text{nm}$.

STEP 3: OPERATING

- 3.1 Press ON/OFF button. The unit will power up in a STANDBY mode.
- 3.2 Press READY button. System fan will start and after 2 second delay aiming red beam will be turned ON. Laser parameters can be selected from the pre-set Procedures or adjusted manually.




NOTE: Unit will only emit laser energy when footswitch is pressed and set to READY mode. In READY mode, values may be changed only when footswitch is released.

When the tip is straight, the aiming beam will look like a circle, outlining the area where main laser power is applied.



[Figure 7]

When footswitch is pressed, laser power is applied and beam will fill the middle area of the spot.

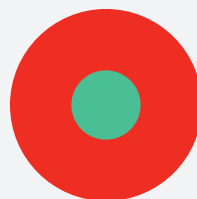

[Figure 8]



WARNING: When aiming beam is not present or has a significantly different shape, change the tip and inspect/clean the protective window.

- 3.3 At this point laser is ready to use, pressing the footswitch will activate laser radiation. Refer to EQUIPMENT DESCRIPTION for guide through main menu functions or User Manual for detailed explanation.
- 3.4 Press ON/OFF button to go to sleep mode when not in use.



NOTE: System will automatically go first to STANDBY mode and then to sleep mode when not in use for 15 minutes.

STEP 4: ezlase™ SPECIFICATIONS

General

- ▶ Dimensions W x H x D (3.5" x 7.0" x 2.5") (8.5 x 18 x 6cm)
- ▶ Weight 2 lbs. (1.0 kg)

Electrical

- ▶ Operating Voltage 100 to 240 ~ at 2A
- ▶ Frequency 50 / 60 Hz
- ▶ External Fuses None
- ▶ Main Control Power Switch
- ▶ On / Off Controls Keypad Button, Emergency Stop
- ▶ Remote Interruption Remote Interlock Connector

Laser

- ▶ Laser Classification IV (4)
- ▶ Medium GaAlAs, InGaAsP
- ▶ Wavelength 810 ± 15 nm or 940 ± 15 nm
- ▶ Max Output Power 7 Watts @ 940nm, 4.5 Watts @ 810nm
- ▶ Power Accuracy ± 20%
- ▶ Power Modes Continuous, Pulse Modulation
- ▶ Pulse Length* 0.06 ms - 10 sec
- ▶ Pulse Interval* 0.06 ms - 10 sec
- ▶ Pulse Repetition Rate up to 10 KHz (for reference)
- ▶ Fiber Tips Diameter 200, 300, 400 μm
- ▶ NOHD 11.8 meters
- ▶ Beam Divergence 8-22 degrees per side angle
- ▶ Fiber Cable Length 5 feet (1.524 meters)

Other Light sources

- ▶ Aiming Beam Laser Diode, max 3 mW, 630-670nm, class 3B

** The following ComfortPulse® length and interval settings will result in the ranges specified:*

Display	Range
0.05 ms	0.05 ms – 0.07 ms
0.10 ms	0.10 ms – 0.14 ms
0.20 ms	0.20 ms – 0.28 ms